

Ciphertex NAS Supported USB Printer List

Brand	Model	Windows/Mac	Note
Brother	HL-2140	Windows, Mac	
Brother	HL-2040	Windows, Mac	
Brother	MFC-7340	Windows, Mac	
Brother	MFC-7440N	Windows, Mac	
Canon	PIXMA IP100	Windows	
Canon	PIXMA IP1880	Windows	
Canon	PIXMA IP1980	Windows	
Canon	PIXMA IP3500	Windows	
Canon	PIXMA IP3680	Windows	
Canon	PIXMA IP4000	Windows, Mac	
Canon	PIXMA IP4300	Windows	
Canon	PIXMA IP4680	Windows	
Canon	PIXMA IX4000	Windows, Mac	
Canon	PIXMA MP160	Windows	
Canon	PIXMA MP198	Windows	
Canon	PIXMA MP268	Windows	
Canon	PIXMA MX318	Windows	
Canon	PIXMA MX328	Windows, Mac	
Canon	PIXMA MP486	Windows	
Canon	PIXMA MP510	Windows	
Canon	PIXMA MP545	Windows	
Canon	PIXMA MX700	Windows	
Canon	PIXMA Pro 9000	Windows	
EPSON	Aculaser C1100	Windows	
EPSON	Aculaser C1100SE	Windows, Mac	
EPSON	Aculaser C3800DN	Windows, Mac	
EPSON	Aculaser C4200DN	Windows	
EPSON	Aculaser CX11F	Windows	
EPSON	Aculaser M2010	Windows, Mac	
EPSON	B-308	Windows	
EPSON	EPL-6200	Windows, Mac	
EPSON	EPL-6200L	Windows, Mac	
EPSON	EPL-N3000	Windows, Mac	
EPSON	Office T30	Windows, Mac	
EPSON	PictureMate 100	Windows	
EPSON	PictureMate PM210	Windows	
EPSON	PictureMate PM250	Windows, Mac	
EPSON	PictureMate PM270	Windows	
EPSON	Stylus C59	Windows, Mac	
EPSON	Stylus C67	Windows	
EPSON	Stylus C79	Windows	
EPSON	Stylus C90	Windows, Mac	
EPSON	Stylus C110	Windows	
EPSON	Stylus CX2900	Windows	
EPSON	Stylus CX3900	Windows	

Ciphertex NAS Supported USB Printer List

Brand	Model	Windows/Mac	Note
EPSON	Stylus CX4900	Windows	
EPSON	Stylus CX5500	Windows, Mac	
EPSON	Stylus CX5700F	Windows	
EPSON	Stylus CX5900	Windows	
EPSON	Stylus CX6900F	Windows	
EPSON	Stylus CX7300	Windows	
EPSON	Stylus CX8300	Windows	
EPSON	Stylus Photo 1290	Windows	
EPSON	Stylus Photo 1390	Windows, Mac	The User needs to use the Stylus photo 1400 driver for the Mac 10.5.
EPSON	Stylus Photo R250	Windows, Mac	
EPSON	Stylus Photo R270	Windows	
EPSON	Stylus Photo R290	Windows, Mac	
EPSON	Stylus Photo R350	Windows	
EPSON	Stylus Photo R800	Windows	
EPSON	Stylus Photo RX590	Windows	
EPSON	Stylus Photo RX630	Windows	
EPSON	Stylus Photo RX650	Windows, Mac	
EPSON	Stylus Photo RX690	Windows, Mac	
HP	Color LaserJet 1500L	Windows, Mac	
HP	Color LaserJet 2600N	Windows, Mac	
HP	Color LaserJet 2700N	Windows	
HP	Color LaserJet 2840	Windows, Mac	
HP	Color LaserJet 3000DN	Windows, Mac	
HP	Color LaserJet 3800DN	Windows	
HP	Color LaserJet CP1215	Windows, Mac	
HP	Color LaserJet CP1518NI	Windows, Mac	
HP	Color LaserJet CP2025	Windows, Mac	
HP	Color LaserJet CP3000dn	Windows, Mac	
HP	Color LaserJet CP3505DN	Windows, Mac	
HP	Color LaserJet CP3525DN	Windows, Mac	
HP	Color LaserJet CP4005DN	Windows, Mac	
HP	Color LaserJet CP6015dn	Windows, Mac	
HP	DeskJet 9800	Windows, Mac10.5	
HP	DeskJet D1560	Windows, Mac	
HP	Deskjet F2235	Windows, Mac	
HP	LaserJet 1010	Windows, Mac	
HP	LaserJet 1015	Windows, Mac	
HP	LaserJet 1200	Windows, Mac	
HP	LaserJet 1300	Windows, Mac	
HP	LaserJet 1320	Windows, Mac	
HP	LaserJet 2200	Windows, Mac	
HP	LaserJet 2300	Windows, Mac	
HP	LaserJet 3050	Windows	

Ciphertex NAS Supported USB Printer List

Brand	Model	Windows/Mac	Note
HP	LaserJet 4250	Windows, Mac	
HP	LaserJet 4350TN	Windows, Mac	
HP	LaserJet 5200N	Windows, Mac	
HP	LaserJet M1120 MFP	Windows, Mac	
HP	LaserJet M1120n MFP	Windows, Mac	
HP	LaserJet M1522nf	Windows, Mac	
HP	LaserJet M2727nf MFP	Windows, Mac	
HP	LaserJet M3035XS MFP	Windows, Mac	
HP	LaserJet P1006	Windows, Mac	
HP	LaserJet P1505	Windows, Mac	
HP	LaserJet P2015	Windows	
HP	LaserJet P2015n	Windows	
HP	LaserJet P2015DN	Windows, Mac	
HP	OfficeJet Pro K5400	Windows, Mac 10.5	The User needs to use the printer driver for the Mac.
HP	OfficeJet Pro L7580	Windows	
HP	PSC1210	Windows	
Lexmark	E120	Windows, Mac	
Lexmark	E120n	Windows, Mac	
Lexmark	E250dn	Windows, Mac	
Lexmark	E360dn	Windows, Mac	
Lexmark	E450dn	Windows, Mac	
Lexmark	T642	Windows, Mac	
Lexmark	T644	Windows, Mac	
Lexmark	T654	Windows, Mac	
Lexmark	C782	Windows, Mac	
Lexmark	X646	Windows, Mac	
Lexmark	X845	Windows, Mac	
Lexmark	X940	Windows, Mac	
Samsung	ML-1640	Windows, Mac	
Samsung	SCX-4600	Windows, Mac	